

SCENARIOS

Accesses the section containing the list of programmed scenarios which can be activated:

No code required

keys to scroll the list
ACTIVATE key to activate the scenario

User code required depending on scenario



Touch the "Scenarios" option for at least 3 seconds and wait for the beep to activate the Fire Emergency call

COMMANDS

Accesses a section containing the list of outputs which can be activated.

The outputs are divided in two sections:

DOMOTICS outputs for management of home automation

No code required

INTRUSION outputs programmed via the anti-intrusion system

User code required

keys to scroll the list
ON **OFF** key to activate/deactivate the output

output activated/deactivated

keys to adjust the voltage supplied to the output
 level of the voltage supplied



Touch the "Commands" option for at least 3 seconds and wait for the beep to activate the Ambulance Emergency call

SETTINGS

Accesses the sections for the settings of the keypad and the SmartLiving control panel:

User code required

ALIEN provides information regarding the setting-up of the Alien you are using

keys to scroll the list
 keys to change the parameter

DATE/TIME CHANGE PIN TEL. NUMBERS

DATE/TIME section to change date and time of control panel

keys to select the field
 keys to change the field
OK key to confirm the field modified

CHANGE PIN section to change the user code PINs

keys to scroll the list
 key to change the PIN selected
ON
OK key to confirm the changes

TEL. NUMBERS section to change the telephone numbers

keys to scroll the list
 key to change the number selected
OK key to confirm the changes

INSTALLER this section allows access to the installer menu

Installer code required

JOY LOOK section to use the Alien interface as a Joy keypad

ALIEN key to return to the standard mode

Touching the "Settings" option for at least 7 seconds disables the sensitivity of the display for 20 seconds, and the "CLEAN SCREEN" message is shown

SYSTEM

Accesses a section where it is possible to view the system parts:

User code required

FAULTS this section to view all the faults present on the system

keys to scroll the list

DETAILS key to view the fault details

VOLTAGE this section allows you to view the control panel power-supply voltage

GSM INFO this section allows you to view the parameters of the Nexus GSM communicator

Accesses a section which allows you to view and change the status of parts of the intrusion-control system:

User code required

PARTITIONS section to view and change the status of the partitions

keys to select the partition
 keys to change the arming mode
OK key to apply the selected arming mode

ZONES zones are listed in this section along with their status icons

- green spot - standby status
- red spot - alarm status
- yellow triangle - fault/ tamper
- ON** key to activate the zone
- OFF** key to inhibit the zone
- zone activated/enabled
- zone deactivated/disabled

EVENTS LOG here it is possible to view the events saved to the memory

keys to scroll the list
PARTITIONS key to view the partitions involved

Touch the "Intrusion" option for at least 3 seconds and wait for the beep to activate the Police Emergency call

Accesses two sections:

User code required

ACTIONS containing a list of the control panel commands in the event of alarm or tamper events or requests for teleservice and overtime

ACTIVATIONS where it is possible to view and enable the activations of the system parts

keys to scroll the list
 key to activate the action or to access to the system part section
ON **OFF** key to activate/deactivate the element
 element activated/deactivated

Back this key allows you to step back to the previous level of the active function

Home key which allows you to go directly to the home page

Logout key that allows you to close the open session after entering a valid user code

CANCEL key that allows you to exit from the open session without saving the parameters changes

SAVE key that allows you to exit from the open session saving the parameters changes



icon that appears when touching the display and the keypad is locked after entering a wrong PIN for 5 times



icon displayed when approaching a key and the reader is locked after the use of an invalid key for 5 times

Accesses the applications of the Alien touch screen interface:

No code required

PHOTO FRAME application that starts a slideshow of the images contained in the inserted SD-card

VOICE FUNCTIONS accesses a section where it is possible to activate the control panel voice board functions

ON key to start the selected function

• **Record**
 • **Playback**
 • **Delete**

Stop key to interrupt the record/playback operation manually

OK key to confirm the delete function

• **Citofono - tastiera chiamata**

pulsanti per scorrere l'elenco delle tastiere a cui avviare la chiamata citofonica
ON pulsante per avviare la chiamata telefonica

• **Citofono - tastiera ricevente**

OK pulsante per accettare la chiamata
Esc pulsante per rifiutare la chiamata

MAPS applicazione che avvia la supervisione del sistema tramite mappe grafiche

ALARM CLOCK sezione per la visualizzazione e la programmazione di sveglie/promemoria

MEMO

pulsanti per scorrere l'elenco

ON **OFF** pulsante per attivare/disattivare la sveglia/promemoria

SET pulsante per modificare i parametri del relativo elemento

pulsante per attivare/disattivare il suono / l'immagine

pulsante per ascoltare il suono

pulsante per visualizzare l'immagine - toccare l'immagine per chiuderla

OFF pulsante per disattivare la segnalazione dell'allarme/promemoria

SNOOZE pulsante per rimandare di 2 minuti la segnalazione dell'allarme/promemoria

Toccando il tasto "Sveglie" o "Promemoria" per almeno 5 secondi si cancellano tutte le programmazioni della relativa sezione

Access the thermostat sections:

No code required

MANUAL the temperature set by the user is valid for 24 hours per day, for 7 days per week

DAILY the temperature set by the user is valid during the selected hours for 7 days per week

WEEKLY the temperature set by the user is valid during the selected hours on specific days of the week

key to selected for the winter or summer operating modes

- **+** keys to change the temperature

< **>** keys to change the parameter

ANTIFREEZE it forces to winter mode - the activation temperature is 2°C

OFF the thermostat is off - the output associated with the heater or air-conditioner is deactivated

ALIEN

A	Date and time of the SmartLiving control panel. If the control panel is in service status, this field will show the address of the Alien interface and its built-in reader.
B	Keypad LED icons (see table below).
C	Temperature read by the thermometer of the Alien interface.
D	Icon which indicates the presence of an SD card in the card slot.
E	Section for active functions, with the buttons for access to the Alien interface, its applications and the SmartLiving system. The home page of the Alien/S (shown in the figure) shows the function buttons (see behind). In the Alien/G, these buttons are shown in a section on the left and are always visible regardless of the active function.
F	String showing the active scenario of the control panel. If a partition that belongs to the Alien changes its arming status with regard to the active scenario, or when the control panel is in service mode, this string will show the characters relative to the arming status of the partitions: <ul style="list-style-type: none"> • D, partition disarmed • T, partition armed in Away mode • P, partition armed in Stay mode • I, partition armed in Instant mode • -, partition does not belong to the keypad
G	Touch this section of the display to show for 3 seconds a window that lists the scenarios in progress. It may be asked to enter a valid user code, depending on panel programming.
H	System information icons, as described in the table below.



Icon	Not present	ON solid	Blinking
		Telephone line busy	Telephone line down
	All the peripherals in the system configuration are responding properly (present)	At least one peripheral (keypad, reader, expansion) is not responding properly	All the peripherals in the system configuration are responding properly, however, loss of a peripheral has been detected and cleared
	Answerphone function disabled	Answerphone function enabled	
	Teleservice disabled	Teleservice enabled	
			False key
	La tastiera Alien ha il rilevamento di sabotaggio abilitato	La tastiera Alien ha il rilevamento di sabotaggio disabilitato	
	All peripherals are properly placed and all enclosures covers are closed	At least one peripheral (keypad, reader, expansion) is in tamper status (enclosure open or device dislodged)	All peripherals are properly placed and all enclosure covers are closed, however, tamper has been detected and cleared (tamper memory)
	The control panel is properly placed and the enclosure is closed	The control panel is in tamper status (enclosure open or device dislodged)	The control panel is properly placed and the enclosure is closed, however, panel tamper has been detected and cleared (panel tamper memory)
		Ongoing phone call via the Nexus/G dialer	
		Ongoing SMS message sending via the Nexus/G dialer	
		Ongoing event sending via LAN with SIA-IP protocol	LAN board not responding
		Ongoing event sending via Nexus/G with SIA-IP protocol or teleservice on GPRS	
	winter mode	The thermostat option is disabled	The keypad thermostat option is enabled in winter mode (heating)
	summer mode		The keypad thermostat option is enabled in summer mode (air-conditioning)
	heater / air-conditioner	Heating/Air-conditioning OFF	Heating/Air-conditioning ON

Activation	Red LED	Yellow LED	Blue LED	Green LED
OFF (not present)	All the keypad partitions are disarmed.	No faults present.	Open zones on the keypad partitions.	Primary power failure (230V a.c.)
ON (solid)	At least one of the keypad partitions is armed.	At least one fault has been detected.	All the zones on the keypad partitions are in standby status: ready to arm.	Primary power OK (230V a.c.)
Slow blinking (ON: 0.5sec OFF: 0.5sec)	All the keypad partitions are disarmed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm.	No faults present. At least one of the zones belonging to the keypad partitions is either disabled (inhibited) or is in Test status	All the zones belonging to the keypad partitions are in standby status. An unplayed voice message is present in the memo box.	
Fast blinking (ON: 0.15sec OFF: 0.15sec)	At least one keypad-partition is armed. Memory of alarm/tamper on at least one of the keypad partitions or memory of a system alarm.	At least one fault is active and at least one zone belonging to the keypad partitions is either disabled (inhibited) or is in Test status.	Open zones on the keypad partitions. An unplayed voice message is present in the memo box.	